


MJ85说明书, 成品尺寸： 140 *105 mm, 105g 铜版纸, 彩印, 先左右，后上下风琴折。

GW997MGKB Magnetic gaming keyboard Specifications

USER MANUAL

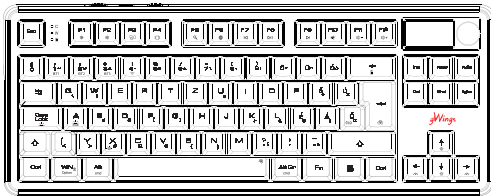

1.0 Connection of the keyboard

Wired Mode :

- 1.The power key at the top of the keyboard is moved to the middle position.
- 2.Then connect the power cable.
- 3.The backlight of the keyboard lights up, and at the same time, the charge indicator turns red.
- 4.The keyboard plug and play.

Wireless 2.4G mode :

- 1.The power key at the top of the keyboard is moved to the 2.4G position.
- 2.The light at 4 key position flashes slowly in green color, then plug in the receiver, the 2.4G mode of the keyboard has been successfully connected
- 3.If the connection cannot be made following the above steps, then please perform the pairing. After long-pressing FN+4 for 3 seconds, the 4 key will flash green quickly. Plug in the receiver and once the connection is successful, you can start using it.

Bluetooth Mode :

- 1.The power key at the top of the keyboard is moved to the BT position.
- 2.The light at 1/2/3 key position flashes slowly in blue/yellow/white, then find the BT name “gW997mgkb-1/-2/-3” in your computer, after the connection is successful, the indicator light changes along with the backlight.
- 3.If the connection cannot be made following the above steps, then please perform the pairing. After long-pressing FN+1/2/3 for 3 seconds, the 1/2/3 keys will flash blue/yellow/white quickly. Then connect to Bluetooth and you can use it.

Troubleshooting:

If the keyboard does not respond, check whether the USB port or USB receiver is properly plugged in, or check whether the Bluetooth connection is successful.

2.0 Specification parameters

Features:

- * TKL size wireless gaming keyboard with multimedia display screen and Knob wheel
- * Magnetic switch with Hall effect
- * Painting keycaps with HUN layout
- * Customized switches with customized HUN software
- * RGB backlight with multi effects
- * Within 4000mA battery
- * Silicone anti-slip feets.
- * Detachable 1.8m USB-A to USB-C PVC cable.

Specification:

- * Dimensions: 372*145*46.7MM
- * System support: Windows XP/7/8/10/11 or later, MacOS
- * Keyboard layout: 85 keys with US and Hungarian layout.
- * Support all keys anti-ghosting.
- * Material: ABS injection.
- * Polling rate: 1000Hz
- * Color: Black/Grey/Red

3.0 Key Function Description

Roller functions:



* Knob wheel description:

- Press knob: mute.
- Turn the knob left: Volume
- Turn the knob right: volume+

Display screen

* Enter the settings page:

- 1.Press the FN + knob to enter the settings page.
- 2.Rotate the knob left or right. Press the knob once gently to confirm the current option.
- 3.Press the FN + knob again to exit the screen settings page.

* FN+Ins=Screen display On/Off

* FN+Home=Short press to bring up the animation ,then press again to return to the Homepage

* FN+C=Hungarian

* FN+V=Switch to English

- * Display screen functions: Animation, Homepage(Display time,date,battery level and connection method), Backlight effects, Backlight color, Backlight brightness, Backlight Speed, Volume, Language

Indicator:



Caps indicator light:

When the Caps key locked, the indicator light will be on white. When it is unlocked,the light will go off.

Win indicator light:

When the Win key locked, the indicator light will be on white. When it is unlocked,the light will go off.

Charging indicator light:

Low Power:When the keyboard battery is low,the indicator light flashes red rapidly.

Charging:When charging,the indicator light red.

Full Power:The indicator light goes out after it is fully charged.

Win/Mac system switching:

The switch in the top of the keyboard, when switched to the left, is for the Windows system, and when switched to the right, is for the Mac system



4.0 Multimedia Keys

Combination keys	Multi-media Function	
	Win system	Mac system (No need to press FN)
FN+F1	Screen brightness-	
FN+F2	Screen brightness+	
FN+F3	Multi-screen display	Task view
FN+F4	App switching	
FN+F5	Search	
FN+F6	Switch input methods	
FN+F7	Previous track	
FN+F8	Play/Pause	
FN+F9	Next track	
FN+10	Mute	
FN+11	Volume-	
FN+12	Volume+	
FN+Win	Lock Win key	
FN+Space key	Press and hold 3 seconds,the keyboard backlight flashes three times, and the keyboard will be restored to its factory default settings	
FN+U	Switching backlight effect	
FN+Enter	Switching backlight color	
FN+X	Backlight On/Off	

FN+↑	Backlight brightness+
FN+↓	Backlight brightness-
FN+←	Backlight speed-
FN+→	Backlight speed+
FN+Caps	Switch the side light modes
FN+A	Switch the side light color
FN+Home	Switch between the animation and the homepage
FN+Ins	Screen display On/Off
FN+C	Switch to Hungarian
FN+V	Switch to English
FN+Backspace	Check the battery level

5.0 Multimedia Keys

In Bluetooth /2.4G mode, if there is no operation for two minutes, it will automatically enter power-saving mode. Click any key to wake up the keyboard. After 30 minutes the keyboard enter deep sleep.

In wireless mode. you can check the battery level of the keyboard on the connected device.

Low power:

In wireless mode, when the battery voltage is detected to be lower than or equal to 3.1V, it enters the shutdown state. After plugging in the wired charging, it can be used normally again.

When the battery voltage is greater than or equal to 3.3V, it can be used normally.

When the battery voltage drops below 3.4V, forcibly turn off the lights (the button has a function). And the low-voltage indicator light flashes slowly (one frequency per second)